


## Rapid Hitch parts illustration and instructions

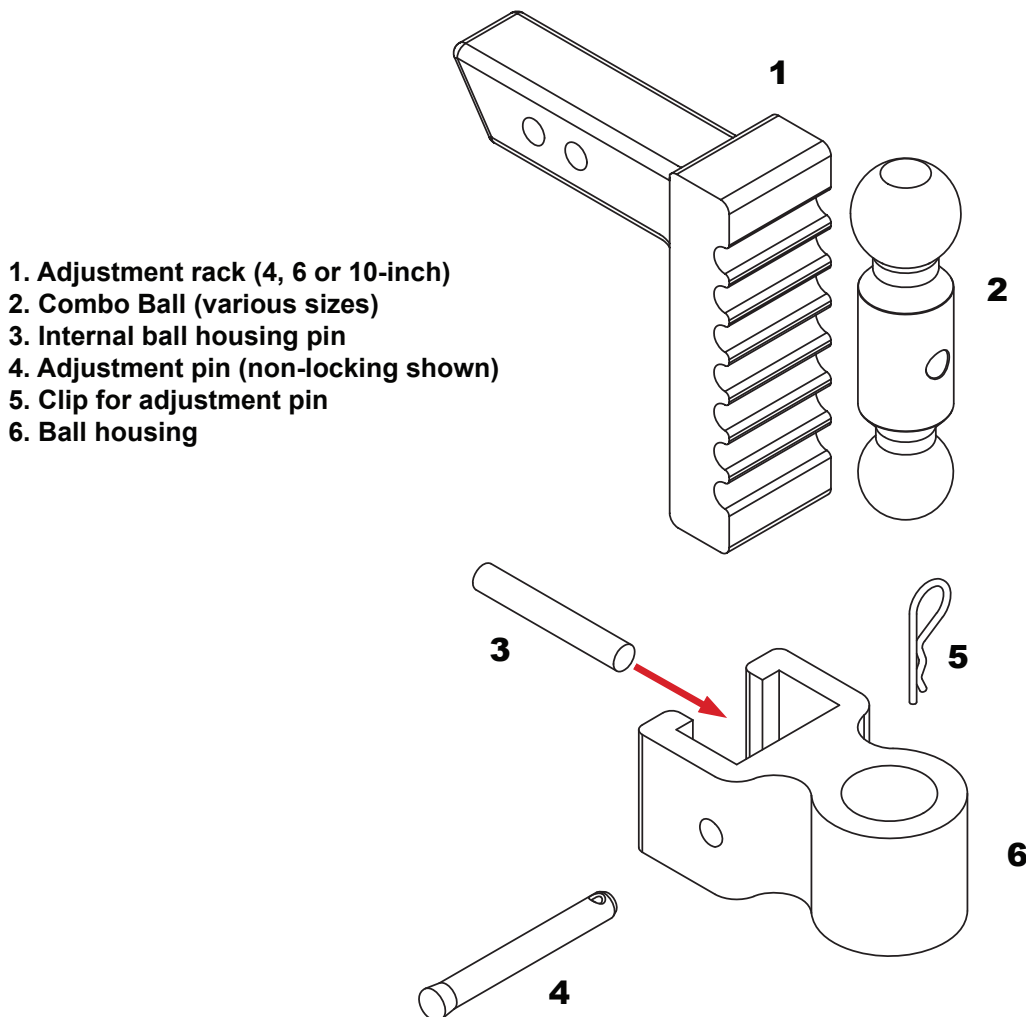

### Rotating the Combo Ball

- Remove the adjustment pin clip (#5)
- Slide the adjustment pin out (#4)
- Slide the ball housing assembly (#6) off of the adjustment rack
- Turn the ball housing over
- Slide the ball housing assembly back on to the rack
- Replace the adjustment pin and clip.

### Swapping out the ball

If you purchased a separate Combo Ball or Single Ball for your Rapid Hitch and wish to swap it out, you can remove the current Combo/Single Ball by removing the housing assembly as explained above, and then removing the internal ball housing pin (#3 above). You may need to use a 1/4" standard coarse thread bolt to remove the internal pin. Just screw the bolt in to the threaded hole at the end of the internal pin and pull on it to remove the pin. Remove the ball you are replacing, insert the desired Combo/Single Ball into the ball housing, line up the hole in the ball housing with the hole in the Combo/Single Ball and place the internal pin back in to the ball housing through both sets of holes. Now slide the ball housing assembly back on to the rack and replace the adjustment pin and clip.