



# Croft Trailer Supply

## Torque Specifications

Using a properly calibrated torque wrench, all the lug nuts installed with any new tire/wheel assembly must have their torque values checked after the first 10, 25, and 50 miles (and periodically checked during normal use thereafter). This process should be repeated any time that the lug nuts are removed from the wheel.

Size	Bolt Circle	Off Set	Recommended Torque (ftlbs)	
			Steel	Aluminum
12"	4-4 or 5-4.5	0.00	50-75	95-105
13"	4-4 or 5-4.5	0.00	50-75	95-105
14"	5-4.5	0.00	90-120	110-120
15"	5-4.5	0.00	90-120	110-120
15"	6-5.5	0.00	90-120	110-120
16" (1/2" Stud)	6-5.5	0.00	90-120	110-120
16" (9/16" Stud)	8-6.5	0.00	90-120	125-130
17.5" (9/16" Stud)	8-6.5	0.00	N/A	125-130
17.5" (5/8" Stud)	8-6.5	0.00	275-325 (Flange Nut)	150

\*Always verify installation recommendations, procedures, and tolerances with all other running gear component(s)

## Lug Nut Installation Sequence(s)

