



MAINTENANCE SCHEDULE

Regular trailer maintenance is essential to ensure safe and smooth travels.

Item + Function Required	Weekly	3 Months or 3,000 Miles	6 Months or 6,000 Miles	12 Months or 12,000 Miles
Brakes: Test they are operational.	At Every Use			
Brake Adjustment: Adjust to proper operating clearance.		X		
Brake Magnets: Inspect for wear and current draw.			X	
Brake Lining: Inspect for wear or contaminate.				X
Brake Controller: Check for correct amperage and modulation.			X	
Brake Cylinders: Check for leaks and sticking.				X
Brake Lines: Inspect for cracks, leaks or kinks.				X
Trailer Brake Wiring: Inspect wiring for bare spots, fraying, etc.				X
Breakaway System: Check battery charge and switch operation.	At Every Use			
Hub/Drum: Check for abnormal wear or scoring.				X
Wheel Bearings: Inspect for corrosion or wear. Clean and repack.				X
Seals: Inspect for leakage. Replace if removed.				X
Springs: Inspect for wear, loss of arch.				X
Suspension Parts: Inspect for bending, loose fasteners and wear.			X	
Hangers: Inspect welds.				X
Wheel Nuts and Bolts: Tighten to specified torque values.		X		
Wheels: Inspect for cracks, dents or distortion.			X	
Tire Inflation Pressure: Inflate tires to manufacturer's specifications.	X			
Tire Condition: Inspect for cuts, wear, bulging, etc.		X		

Source: Dexter Operation Maintenance Service Manual

Disclaimer: This is a suggested maintenance schedule only. Please refer to your trailer manufacturer's guide for specific maintenance requirements. Croft Trailer Supply is not liable for any damages or issues resulting from following this schedule.

CONTACT US: WWW.CROFTTRAILER.COM OR 1 (800) 426-8159

Smithville, MO	Phone:	816-532-8900
Lee's Summit, MO	Phone:	816-525-9355
Kansas City, MO	Phone:	816-483-7274
Olathe, KS	Phone:	913-780-1818

