




Doing Our Best to Provide You the Best

HJ20005, Rev 0  
01/26


# MOLLE GRID SYSTEM MOUNTS FOR FORD F250 - F350

## 8554001

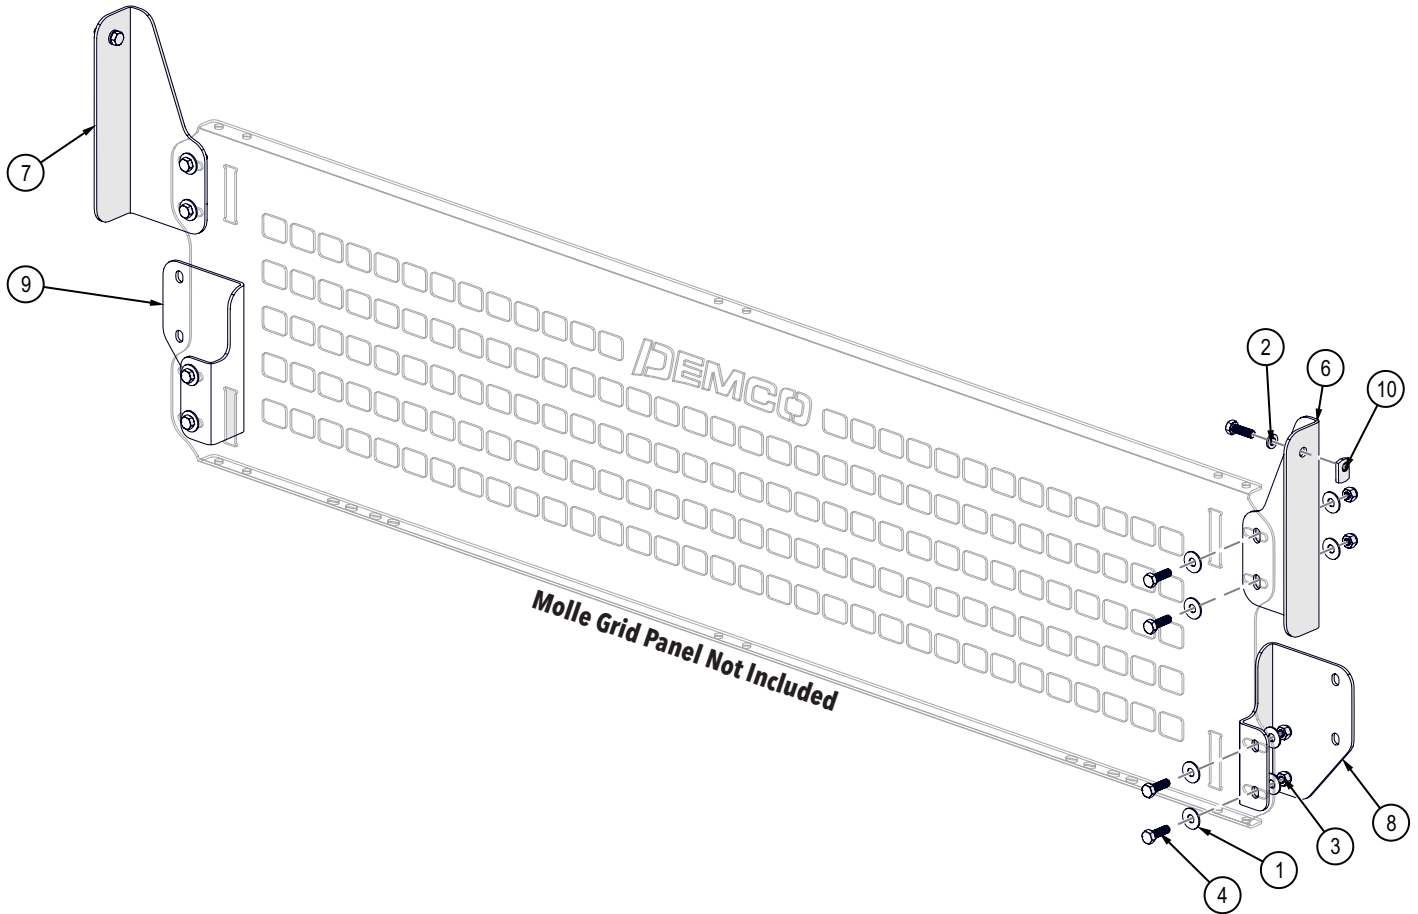


### 8554001 Parts List


ITEM #	PART #	DESCRIPTION	QTY
1	00004	WASHER, FLAT, .313	16
2	01997	WASHER, SPRING LOCK .313	2
3	02802	NUT, .313 NC NYLON LOCK	8
4	02990	BOLT .313NC X 1.00 GR5 HEX	10
5	18712-72	MOLLE FRONT BOX PANEL	1
6	18718-72	TOP BOX MOUNT, RIGHT	1
7	18719-72	TOP BOX MOUNT, LEFT	1
8	18720-72	LOWER BOX MOUNT, RIGHT	1
9	18721-72	LOWER BOX MOUNT, LEFT	1
10	18836	.313 THREADED SS PLATE	2

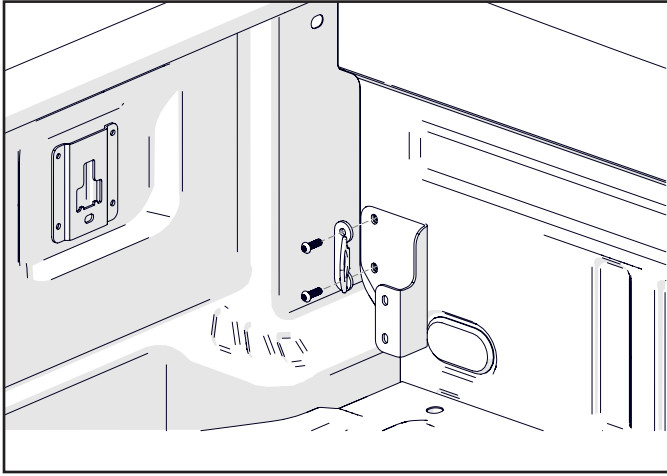


1. Remove the lower box tie downs and install the lower molle mounts under the factory tie downs and reinstall. Keep all fastens loose until all mounts and molle rack are assembled.

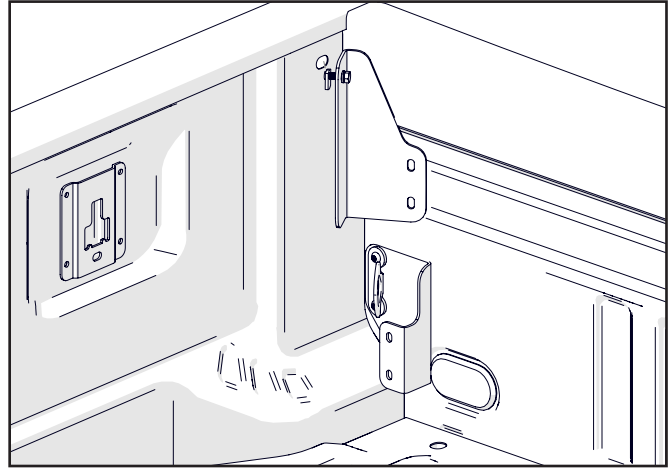

2. Install the 5/16" bolt, lock washer and the threaded plate loosely to the upper mounts. Insert the threaded plate into the upper box pocket hole.

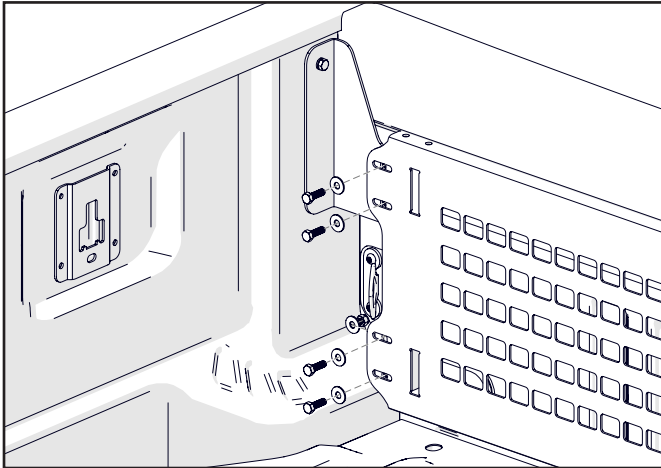

3. Fasten molle grid to the box mounts using the 5/16" bolts, flat washers and nuts. Always put washers on the slotted holes.

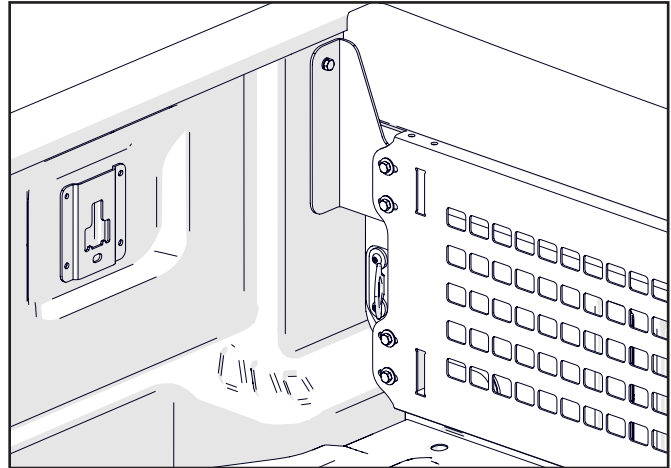

4. Once everything is in position, tighten all fasteners to 18 ft/lbs.