




MTD2FF TONGUE DOLLY

SAFETY & ASSEMBLY INSTRUCTIONS

Tools Needed To Assemble:

Adjustable wrench, rubber mallet and needle nose pliers.

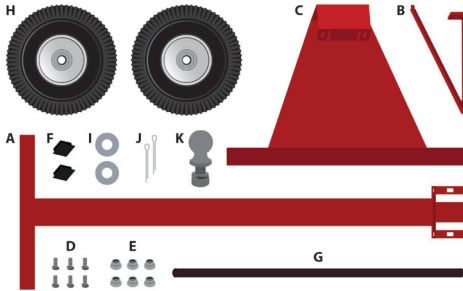

Part	Description	Qty.
A	T-Handle	1
B	Kickstand	1
C	Yolk Assembly	1
D	Carriage Bolts 3/8"	5
E	Flange Nut	5
F	Plastic Plug 1"	2
G	Solid Axle 3/4"	1
H	Flat-Free Wheel & Tire	2
I	Washers 3/4"	2
J	Cotter Pins	2
K	Ball 2"	1

Thank you for purchasing the **MTD2FF Tongue Dolly**.


For additional product information please visit www.CroftTrailer.com.

SAFETY INSTRUCTIONS




- Make sure the trailer coupler is secure on the ball when using the tongue dolly. This is necessary to keep the trailer attached to the tongue dolly.
- Make sure the trailer is properly chocked before attaching the trailer to the tongue dolly. Movement of the trailer before the coupler is secured could cause injury to the operator.
- Never attempt to move loaded trailers with the tongue dolly. The tongue weight of the trailer moved should never be greater than 450 pounds.

ASSEMBLY INSTRUCTIONS

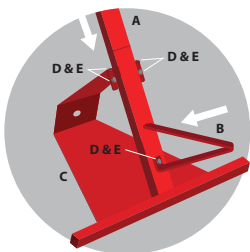


Step 1.

Attach T-Handle [A] and Kickstand [B] to Yolk Assembly [C] with five 3/8" Carriage Bolts [D] and five Flange Nuts [E].

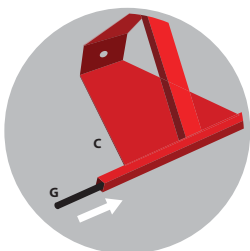


Step 2.

Insert 3/4" Solid Axle [G] into axle sleeve on Yolk Assembly [C].

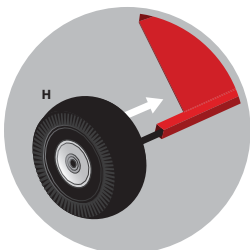


Step 3.

Install Flat-Free Wheel & Tires [H] (long side of hub inward) with 3/4" flat Washers [I] on the outside and secure with Cotter Pins [J].

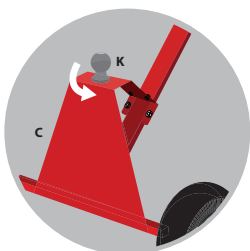

Step 4.

Install 2" Ball [K] to Yolk Assembly [C] through the hole and tighten securely.

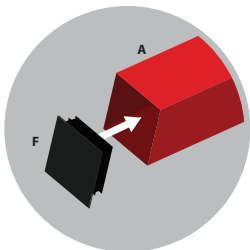

Step 5.

Install Plastic Plugs [F] into T-Handle [A]. Your **MTD2FF** is now ready to use.